

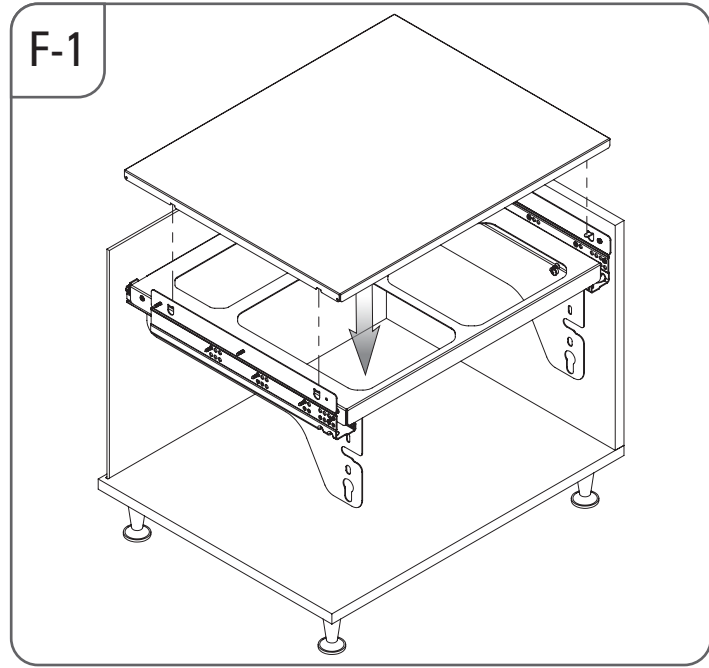
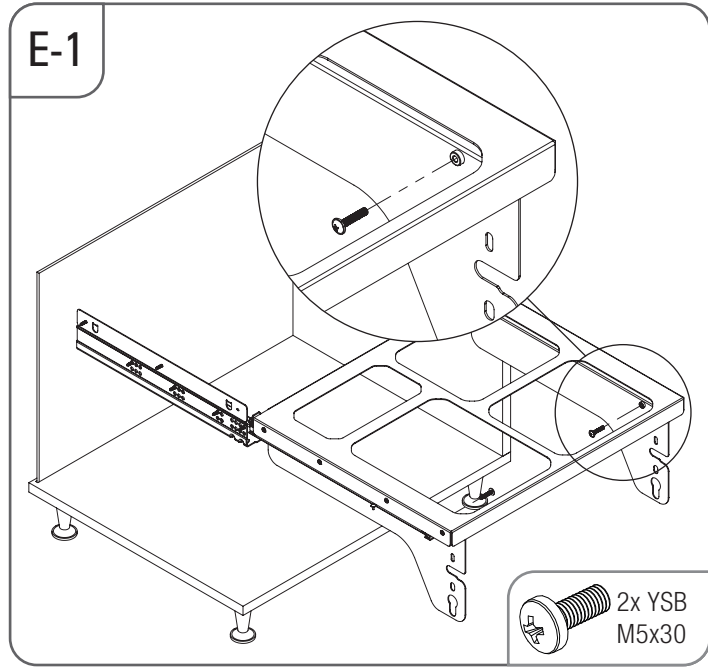
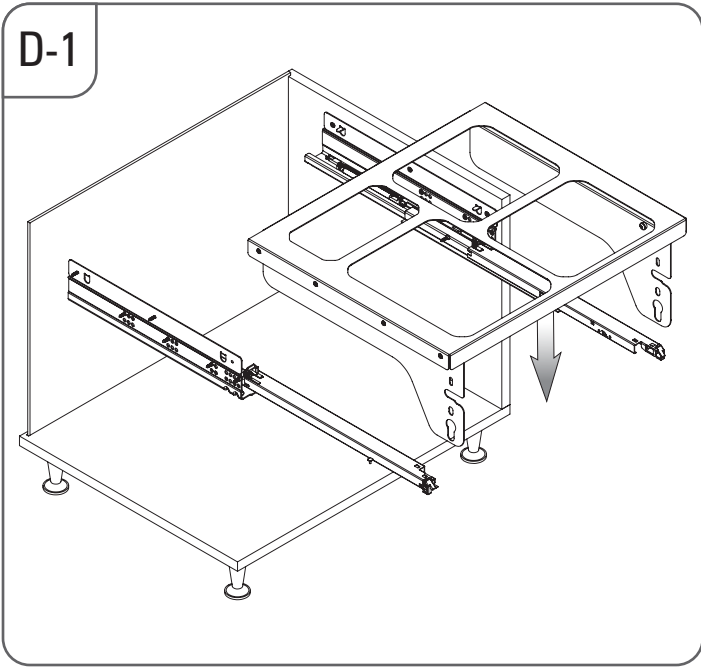
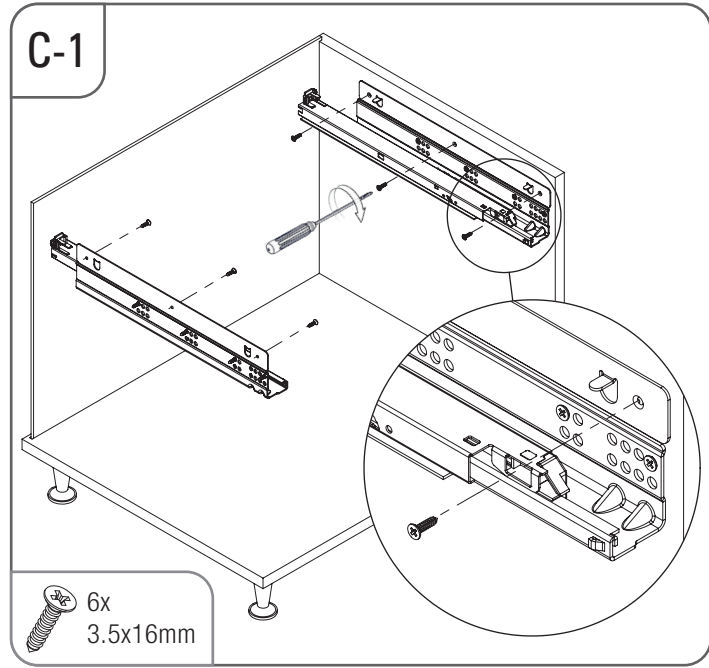
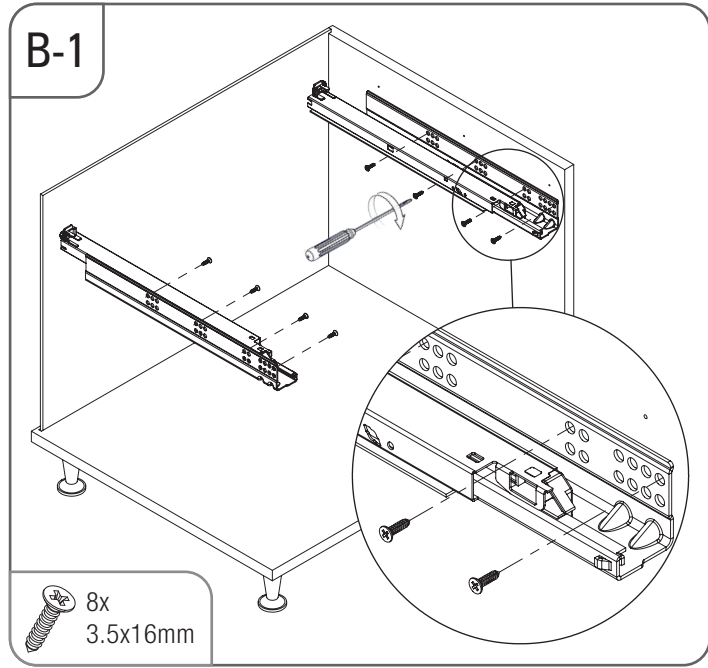


- KAPAĞA MONTE ÇÖP KOVASI FRENLİ MONTAJ ŞEMASI
- WASTE BIN MOUNTED TO LID SOFT CLOSING MOUNTING INSTRUCTIONS

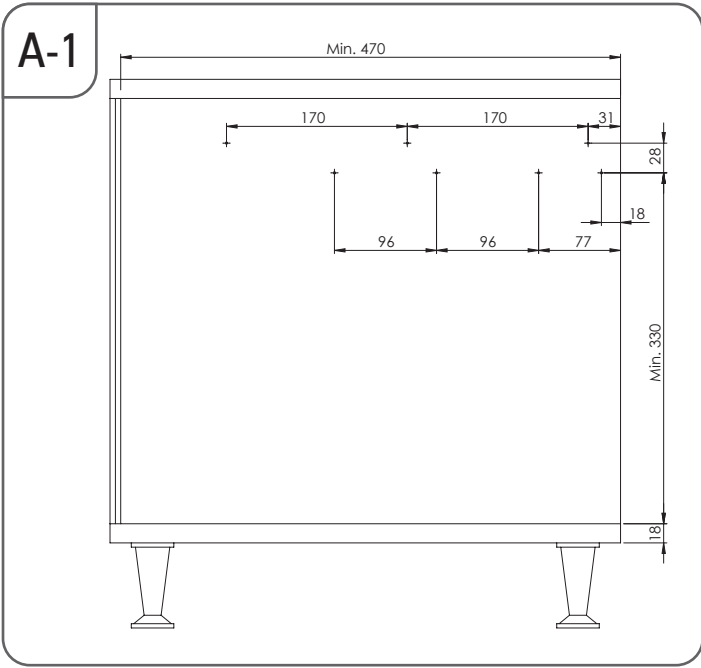


- KAPAĞA MONTE ÇÖP KOVASI FRENLİ MONTAJ ŞEMASI
- WASTE BIN MOUNTED TO LID SOFT CLOSING MOUNTING INSTRUCTIONS

G-1

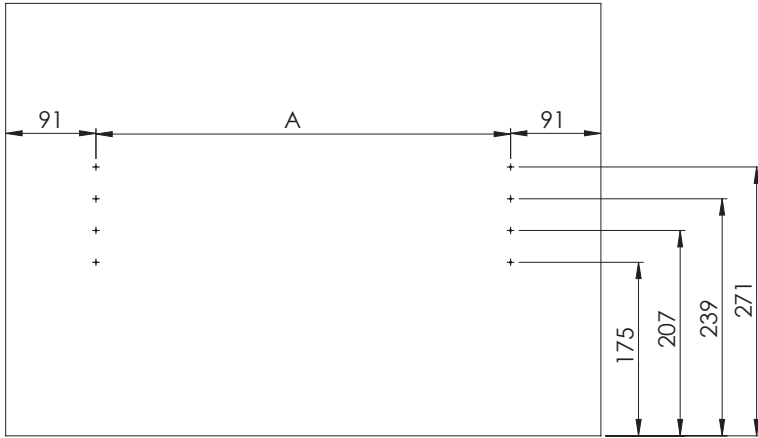


Code	A (mm)
S-2381-	218
S-2382-	268
S-2383-	318
S-2384-	368
S-2385-	418
S-2386-	518
S-2387-	618
S-2388-	718

H-1

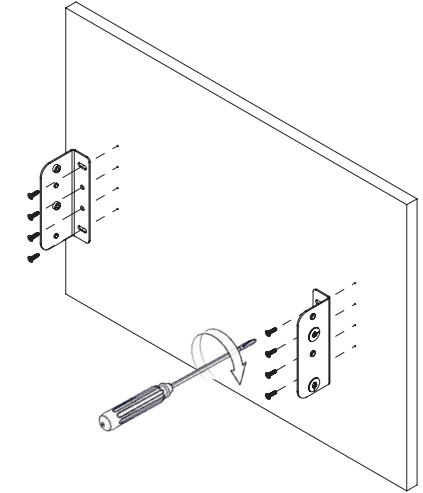


8x
3.5x16mm

J-1

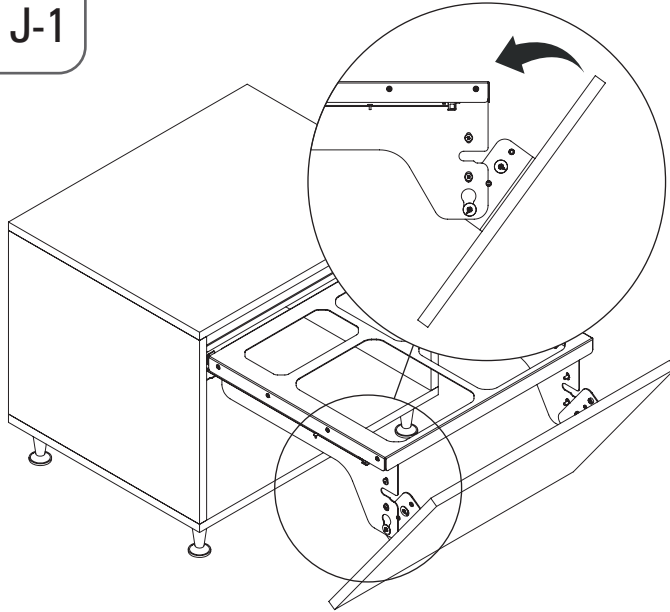

K-1

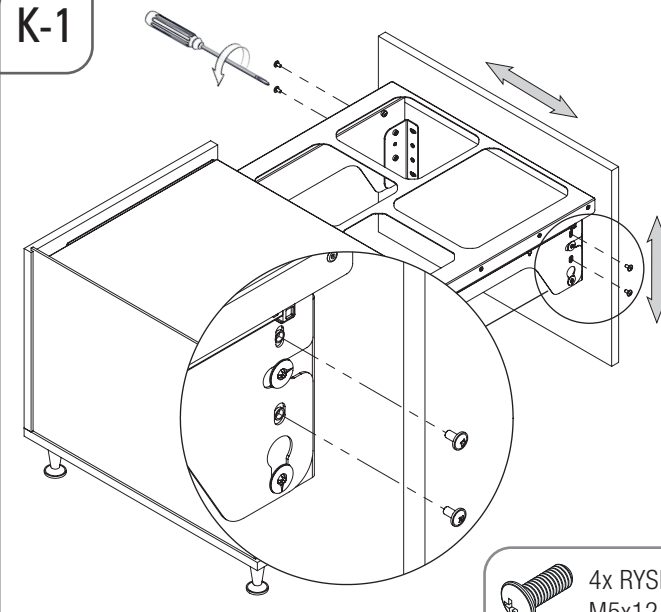

4x RYSB
M5x12

L-1

